


 
2018 370Z - March 2018

File Edit View Favorites Tools Help


 **2018 370Z - March 2018**

eWD - Electronic Wiring Diagram

- Select Wiring diagrams -



SECTION
● A GENERAL INFORMATION
● B ENGINE
● D TRANSMISSION & DRIVELINE
● E SUSPENSION
● F BRAKES
● G STEERING
● H RESTRAINTS
● I VENTILATION, HEATER & AIR CONDITIONER
● J BODY INTERIOR
● K BODY EXTERIOR, DOORS, ROOF & VEHICLE SECURITY
● L DRIVER CONTROLS
● M ELECTRICAL & POWER CONTROL
● N DRIVER INFORMATION & MULTIMEDIA
● O CRUISE CONTROL & DRIVER ASSISTANCE
● Z OVERALL CIRCUIT DIAGRAM

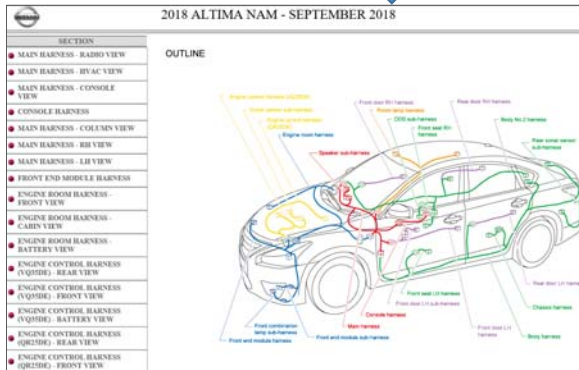

SECTION	SUB-SECTION
● POWER SOURCE	● BATTERY POWER SUPPLY
	● ACCESSORY POWER SUPPLY
	● IGNITION POWER SUPPLY
	● FUSE BLOCK (J/B)
	● FUSE, FUSIBLE LINK AND RELAY BOX
	● FUSIBLE LINK BOX (BATTERY)
	● IPDM ER (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector Name
 Connector No.


 * During input, be careful about upper and lower cases.

eWD Navigation Reference Guide

Note: To access, locate, and select a connector in the diagram the window screen must set to 100% as shown below. You can zoom in and out of diagram, but must go back to 100% if you want to be able to select all connectors.

The screenshot shows the eWD software interface with a wiring diagram titled "STARTING SYSTEM" for a "2018 370Z - March 2018". The left side panel is expanded to show a "Connector List" and a "Connector Detail" table. The diagram shows a "BATTERY" connected to a "10A 9" fuse block, which is further connected to a "4A" fuse. Other components include a "STARTER RELAY" and two "15A" fuses. The interface includes a menu bar (File, Edit, View, Favorites, Tools, Help) and a breadcrumb trail: "Diagram > B ENGINE > STR STARTING SYSTEM".

Navigation callouts include:

- Collapse and Expand Left Side Panel:** Points to the left arrow icon in the breadcrumb trail.
- Displaying Section. Click to return back to Section list:** Points to the breadcrumb trail.
- Navigate to Required Location and Click. Click will Display Connector Detail on Left Side Panel:** Points to the "10A 9" fuse block in the diagram.
- Click and Zoom In side Panel:** Points to the zoom in (+) button in the side panel.
- Click and return side panel to standard view size:** Points to the zoom out (-) button in the side panel.
- Click and Zoom Out Wiring Diagram:** Points to the zoom out (-) button in the diagram toolbar.
- Click and Zoom In Wiring Diagram:** Points to the zoom in (+) button in the diagram toolbar.
- Click to Print Diagram and all Connectors:** Points to the print icon in the diagram toolbar.
- Selecting the Connector Details will only work if Explorers Zoom is set to 100%:** Points to the 100% zoom level indicator in the diagram toolbar.
- Click and Return to Diagram Normal View:** Points to the normal view icon in the diagram toolbar.
- Click and Return to Full Page View:** Points to the full page view icon in the diagram toolbar.
- Click and Return to eWD Main Page:** Points to the home icon in the diagram toolbar.

A text box at the bottom left states: "You will still be able to select Connector Details if using these zoom in and out buttons".